



DEKTITE® Soaker Set




DEKTITE® an Rohr anpassen.

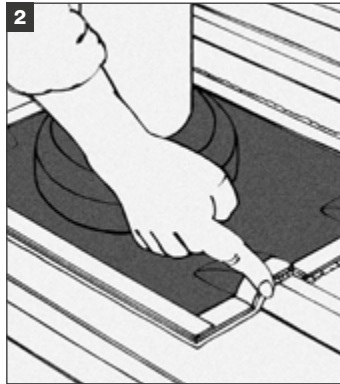


DEKTITE® an Profilblech anpassen und markieren.

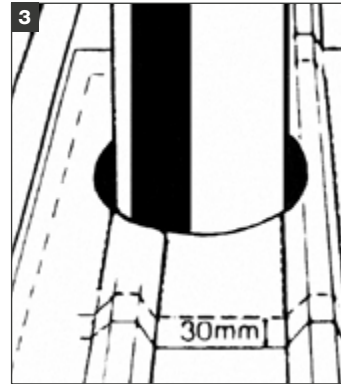


Rand des DEKTITE® auf dem Dach markieren. DEKTITE® entfernen und einen 30 mm Überlappungsbereich markieren.

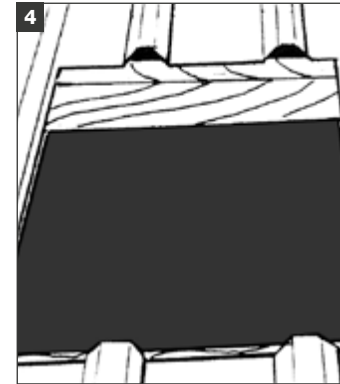

Den Bereich innerhalb des 30 mm-markierten Feldes ausschneiden. Scharfe Kanten entgraten. Zur Stabilisierung des Dachausschnittes ist, falls erforderlich, ein Wechsel anzubringen.

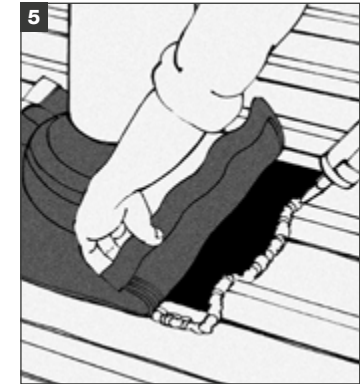

Dichtungsmasse auftragen und DEKTITE® formgenau an Profilblech anpassen.

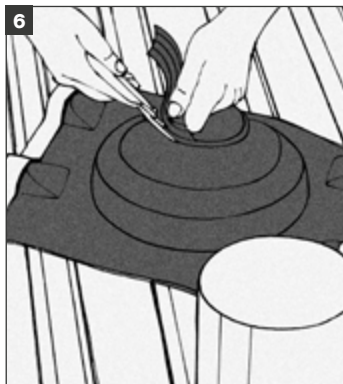

Zuerst auf den Seiten mit den Profilrippen befestigen, mittig angefangen. Die restlichen Seiten folgend.




Beigefügte Metallstreifen verwenden um überlappende Enden abzudichten. Eventuell überstehende Seiten weg-schneiden.


DEKTITE[®] Soaker Set



Adjust DEKTITE[®] to the pipe.

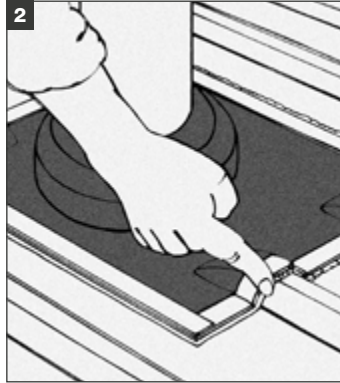


Adjust DEKTITE[®] to the profiled sheet and mark.

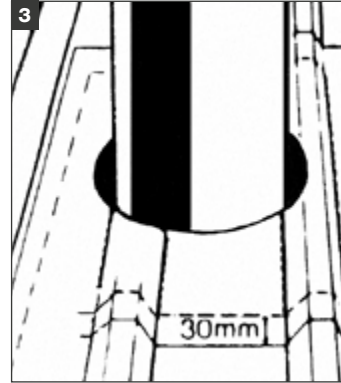


Mark the outline of the DEKTITE[®] on the roof. Remove DEKTITE[®] and mark a 30 mm overlap area.



Cut out the roof inside of the marked 30 mm area. Trim sharp edges. Timber supports may be installed to support the roof where ribs have been removed.

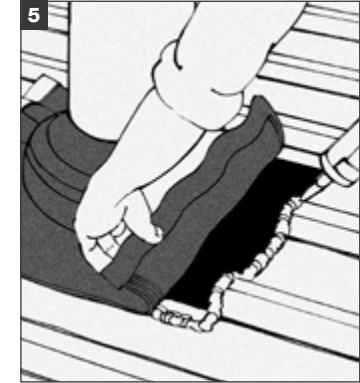

Apply sealant and fit DEKTITE[®] accurately to the profiled sheet.

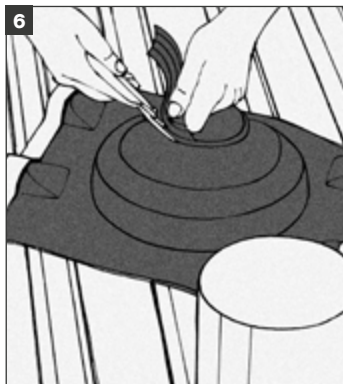

Fix first on the sides with the profile ribs, start in the middle. Follow with the remaining sides.



Use provided metal strips to seal overlapping ends. Trim excess sides